



DP4000 Series Radio

- 1 On / Off Volume Control**
- 2 Channel Selector**
- 3 Press To Talk (PTT)**
- 4 Microphone**
- 5 No function**
- 6 Lone Worker On / Off (if enabled)**
- 7 No function**
- 8 No function**
- 9 Activity LED**



Lone Worker (If Enabled)

If the Lone Worker feature is enabled, an internal 20 minute (unless requested otherwise) timer is triggered when the radio is activated. If the radio user transmits at any point during this time period then the counter is reset and begins the countdown again.

If the radio is not used during this 20 minute period it will emit an alert tone for 20 seconds prompting the user to confirm they are ok by pressing the PTT button. If for any reason the user is unable to do so, an emergency alarm will be sent out over the radio channel.

To activate lone worker simply press the function button immediately above the PTT switch - a series of high pitch tones indicates that lone worker feature has been enabled, a low pitch series of tones indicates that lone worker feature has been disabled.

Need Support?
01524 833588
sales@intouch-ltd.com

Registered Office Address: Victoria Buildings, 66-67 Marine Road West, Morecambe, Lancashire, LA4 4ET.
InTouch Limited is Registered in England and Wales Company No. 3264661. VAT Registered No. 686 2023 32.



MOTOROLA SOLUTIONS

CHANNEL PARTNER